


WIRING FOR POSITION (Pr & Pt) CONTROL MODES



This wiring diagram shows basic wiring only, and additional wiring configurations are possible for some I/O. Refer to subsequent subsections of this chapter for more detailed wiring information.

Position (Pr & Pt) Control Modes

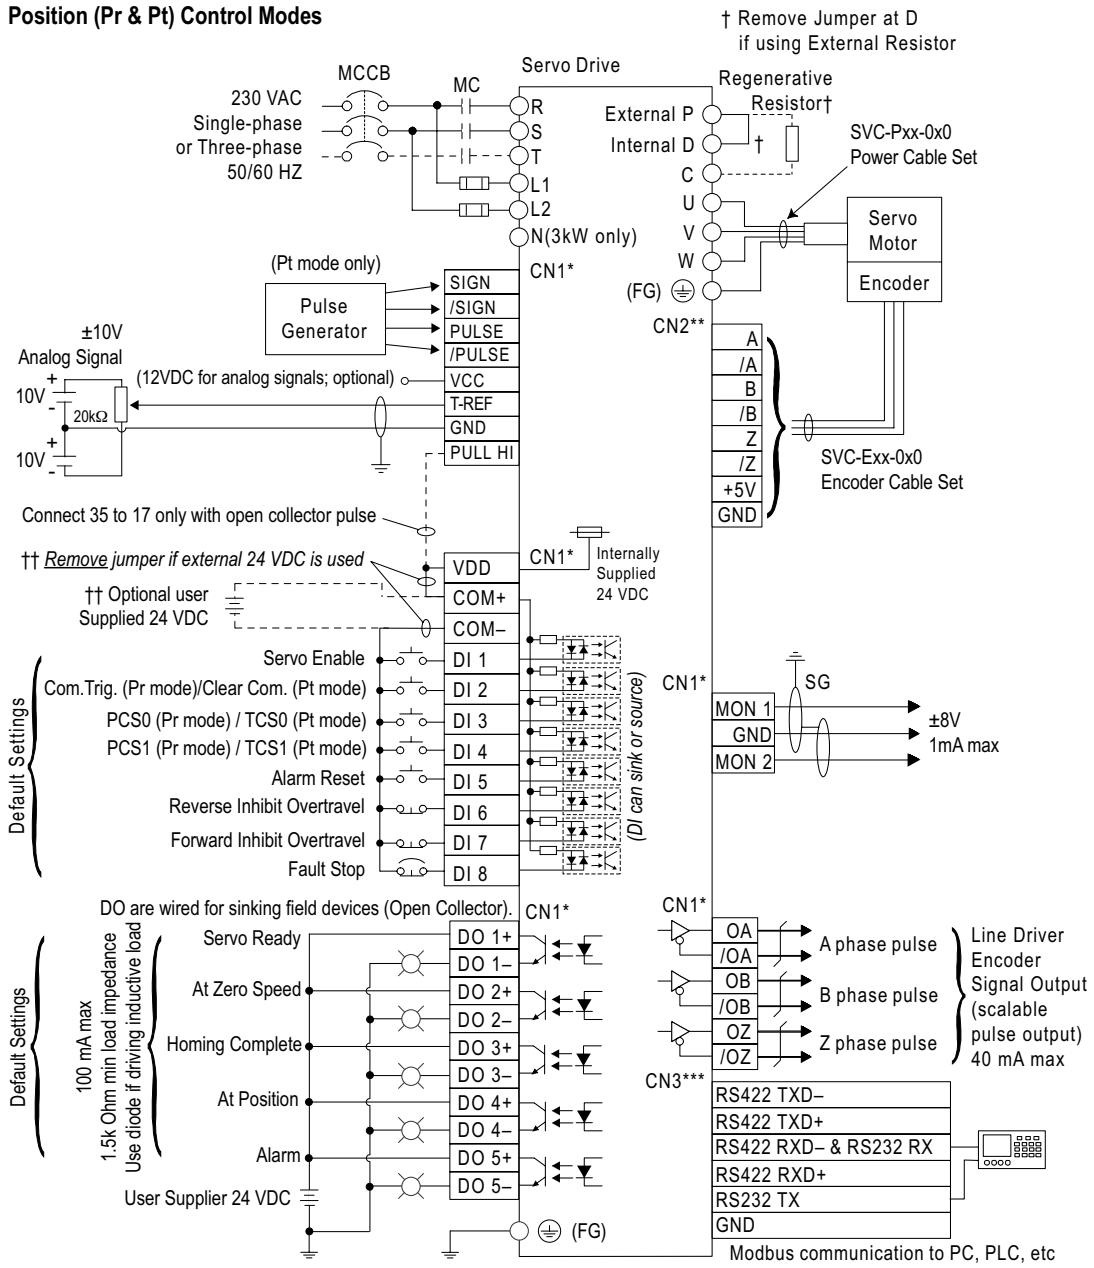

* Use connection kit part #s ZL-RTB50 & ZL-SVC-CBL-50(-x) for CN1 terminal connections.
 ** Use cable part # SVC-Exx-0x0 for CN2 terminal connections.
 *** Use cable part # SVC-MDCOM-CBL for CN3 terminal Modbus network connections.